



# 12V Ø75MM ANGLE GRINDER - BODY ONLY

MODEL NO: **CP1210**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

**IMPORTANT:** PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instructions



Wear eye protection



Wear protective gloves



Wear safety footwear



Wear protective clothing



Wear ear protection



Wear a mask



Wear respiratory mask (fumes)

## 1. SAFETY

### 1.1. GENERAL SAFETY

- ✓ Disconnect the grinder from the mains power before changing accessories, servicing or performing any maintenance.
- ✓ Maintain grinder and discs in good condition. Check moving parts and alignment. If necessary use an authorised service agent.
- ✓ Replace or repair damaged parts. Use recommended parts only. Unauthorised parts may be dangerous and will invalidate the warranty.
- ☐ **WARNING!** Always work with the grinder's safety guard in place.
- ✓ Wear approved safety goggles, ear defenders, gloves and, if grinder generates dust, a dust mask.
- ✓ Position the power cable clear of the grinding wheel to avoid cutting or snagging it. Hold grinder only by insulated gripping surfaces.
- ✓ Remove ill fitting clothing. Remove ties, watches, rings and other loose jewellery and contain long hair.
- ✓ Use grinder in a suitable work area. Keep area clean, tidy and free from unrelated materials and ensure adequate lighting.
- ✓ Maintain correct balance and footing, **DO NOT** over-reach. Ensure the floor is not slippery and wear non-slip shoes.
- ✓ Use only approved grinding discs and only use the normal grinding surface.
- ✓ Check grinding disc to ensure there are no splits, cracks or other damage (see Section 6). If in doubt **DO NOT** use the disc.
- ✓ Grinding discs must be securely attached before use, but not over-tightened.
- ✓ Secure unstable workpiece with a clamp, vice or other adequate holding device and ensure the grinder is gripped with both hands.
- ✓ Keep non-essential persons away from the working area, use screens if necessary.
- ✗ **DO NOT** operate the grinder if any parts are missing or the grinder is damaged.
- ✗ **DO NOT** use the grinder for a task it is not designed to perform.
- ✗ **DO NOT** operate the grinder where there are flammable solids, liquids or gasses.
- ☐ **WARNING! DO NOT** grind any materials containing asbestos.
- ✗ **DO NOT** get the grinder wet or use in damp or wet locations.
- ✗ **DO NOT** switch the grinder on whilst the disc is in contact with the workpiece.
- ✗ **DO NOT** cover the grinder air vents. To do so will overheat the machine.
- ✗ **DO NOT** touch the workpiece immediately after grinding, it will be very hot.
- ✗ **DO NOT** use the grinder as a fixed tool and **DO NOT** try to cool the grinding disc with water or other lubricants.
- ✗ **DO NOT** touch the grinding disc whilst operating, or whilst plugged into the mains power.
- ✗ **DO NOT** leave the grinder running unattended, and **DO NOT** lay the grinder down whilst it is running.
- ✗ **DO NOT** operate the grinder when you are tired or under the influence of alcohol, drugs or intoxicating medication.
- ✓ When not in use switch off grinder, remove plug from power supply and store in safe, dry, childproof area.
- ✓ Use only approved grinding discs and only use the normal grinding surface. Never use the side or upper surface of disc for cutting.
- ✓ The grinding disc may only be changed by a person holding a grinding wheel certificate.
- ✓ Grinding discs must be securely attached before use, but not overtightened.


## 2. INTRODUCTION

Compact, lightweight cordless mini angle grinder. Comfortable composite housing with soft grip to reduce vibration. Brushless motor allows for a longer lasting tool requiring less maintenance. Spindle lock for easy disc changes. Built-in battery charge level indicator. Cutting disc not included. Requires Model Nos. CP1200BP 12V 2.0Ah Battery or CP1200BP4 12V 4.0Ah Battery and CP1200MC Battery Charger.

## 3. SPECIFICATION

Model No:..... **CP1210**  
Battery: ..... 12V 2.0/4.0Ah Li-ion (not included)  
Disc Size:..... Ø75mm  
Free Speed: ..... 19500rpm  
Motor Power:.....200W  
Spindle Size:..... M5  
Noise Power/Pressure: ..... 80/69dB(A)  
Vibration/Uncertainty:.....1.23 (m/s<sup>2</sup>) / 1.5 (m/s<sup>2</sup>)

## 4. ASSEMBLY

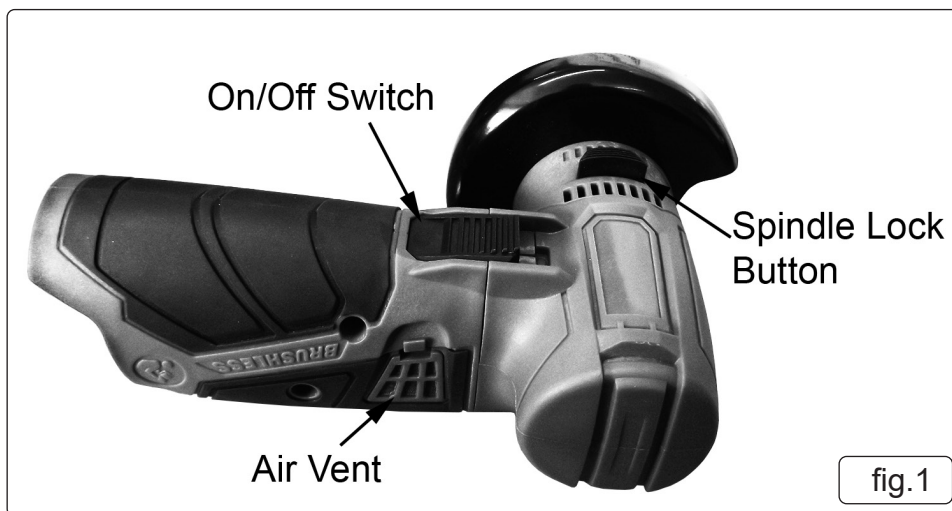

### 4.1. ATTACHING A GRINDING/CUTTING DISC

**NOTE:** Discs should only be fitted by a person holding a grinding wheel certificate.

- 4.1.1. Place the grinding (or cutting) disc over the spindle and onto the clamping flange.
- 4.1.2. When using flat cutting discs, screw the disc retaining flange nut onto the spindle.
- 4.1.3. Stop the spindle from turning by pushing in and holding down the spindle lock button (fig.1).
- 4.1.4. Lock the grinding/cutting disc into place by tightening the disc retaining flange nut with the supplied Hex key.
- 4.1.5. When complete, release the locking button and check that it has sprung back to its initial position.

## 5. OPERATION

- WARNING!** Ensure you have removed the battery from the grinder before changing accessories.

### 5.1. PREPARATION

- 5.1.1. Ensure the cutting disc and safety guard are securely fitted and correctly positioned.
- 5.1.2. Re-attach battery.

- WARNING!** When the grinder first starts it will kick. You must ensure, therefore, that the tool is securely gripped in both hands.
- WARNING!** Before use, ensure that you are wearing approved safety goggles, ear defenders, appropriate dust mask if dust will be generated and safety gloves, and that all other safety instructions in Section 1 are followed carefully.

### 5.2. ON/OFF CONTROL (fig.1)

- 5.2.1. The ON/OFF switch is designed to avoid accidental starting.
- 5.2.2. Once the battery is plugged in start the grinder by pushing the switch (fig.1) forward and down.
- 5.2.3. To stop the machine press the bottom of the switch.
- 5.2.4. If the power to the grinder fails whilst in use release the switch and remove the battery from the grinder. **DO NOT** reconnect the battery until you are sure that the power has been restored.

### 5.3. GRINDING HEAD ALIGNMENT

- 5.3.1. Rotate the grinding head until you can depress the spindle locking button (fig.1) and twist the head to the required position. Ensure the disc is correctly mounted and secure before turning the power on.

### 5.4. CUTTING

- 5.4.1. The key to effective operating is controlling the pressure and surface contact between the disc and the work piece.
  - WARNING! DO NOT** switch the grinder on whilst the disc is in contact with the work piece. Bring the rotating disc to the work piece.
- 5.4.2. Allow the disc to reach full speed before starting to cut.
- 5.4.3. When cutting is complete allow the work piece to cool. **DO NOT** touch the hot surface.
- 5.4.4. Remove the battery from the grinder from the mains power supply, clean and store in a safe, dry, childproof area.

## 6. CUTTING DISCS

- WARNING! DO NOT USE DISCS THAT ARE DAMAGED, OR SUSPECTED TO BE DAMAGED.**
- 6.1. Before using a grinding/cutting disc ensure that there are no fissures or cracks. Once mounted on the grinder, test the disc before use by facing the grinder in a safe direction (point away from yourself, others and vulnerable items) and run for a short time.
  - ▲ **DANGER!** Use of damaged discs is dangerous and may cause personal injury.
- 6.2. Grinding and cutting discs used in association with this machine shall be of an adequate speed rating and be suitable for the job in hand. Only persons holding a grinding wheel certificate are authorised to change grinding discs. Ensure that the speed rating on the disc is equal to, or higher than, that of the grinder.

## 7. MAINTENANCE

- WARNING!** Always disconnect the battery before carrying out any inspection, maintenance or cleaning.

### 7.1. GENERAL INSPECTION

- 7.1.1. Regularly check that all the fixing screws are tight.
- 7.1.2. Repairs should be carried out by an authorised service centre.

### 7.2. CLEANING

- WARNING!** Always wear protective equipment including eye protection and gloves when cleaning this tool.
- 7.2.1. Keep your tool clean at all times. Dirt and dust will cause internal parts to wear quickly, and shorten the device's service life.
- 7.2.2. Clean the body of your machine with a soft brush, or dry cloth.
- 7.2.3. Never use caustic agents to clean plastic parts. If dry cleaning is not sufficient, a mild detergent on a damp cloth is recommended.

- 7.2.4. Water must never come into contact with the tool. Ensure the tool is thoroughly dry before using it.
- 7.2.5. If available, use clean, dry, compressed air to blow through the ventilation holes (where applicable).

**7.3. LUBRICATION**

- 7.3.1. Lightly lubricate all moving parts at regular intervals with a suitable spray lubricant.

**7.4. STORAGE**

- 7.4.1. Store this tool carefully in a secure, dry place out of the reach of children.

**WARNING! – Risk of Hand Arm Vibration Injury.**

This tool may cause Hand Arm Vibration Syndrome if its use is not managed adequately. This tool is subject to the vibration testing section of the Machinery Directive 2006/42/EC. This tool is to be operated in accordance with these instructions.

Measured vibration emission value (a): . . . .1.23 (m/s<sup>2</sup>)  
 Uncertainty value (k): . . . . .1.5 (m/s<sup>2</sup>)

Please note that the application of the tool to a sole specialist task may produce a different average vibration emission. We recommend that a specific evaluation of the vibration emission is conducted prior to commencing with a specialist task.

A health and safety assessment by the user (or employer) will need to be carried out to determine the suitable duration of use for each tool.

NB: Stated Vibration Emission values are type-test values and are intended to be typical.

Whilst in use, the actual value will vary considerably from and depend on many factors.

Such factors include; the operator, the task and the inserted tool or consumable.

NB: ensure that the length of leader hoses is sufficient to allow unrestricted use, as this also helps to reduce vibration.

The state of maintenance of the tool itself is also an important factor, a poorly maintained tool will also increase the risk of Hand Arm Vibration Syndrome.

**Health surveillance.**

We recommend a program of health surveillance to detect early symptoms of vibration injury so that management procedures can be modified accordingly.

**Personal protective equipment.**

We are not aware of any personal protective equipment (PPE) that provides protection against vibration injury that may result from the uncontrolled use of this tool. We recommend a sufficient supply of clothing (including gloves) to enable the operator to remain warm and dry and maintain good blood circulation in fingers etc. Please note that the most effective protection is prevention, please refer to the Correct Use and Maintenance section in these instructions. Guidance relating to the management of hand arm vibration can be found on the HSC website

[www.hse.gov.uk](http://www.hse.gov.uk) - Hand-Arm Vibration at Work.



**WEEE REGULATIONS**

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.



**ENVIRONMENT PROTECTION**

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



**Note:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. Please note that other versions of this product are available. If you require documentation for alternative versions, please email or call our technical team on [technical@sealey.co.uk](mailto:technical@sealey.co.uk) or 01284 757505.

**Important:** No Liability is accepted for incorrect use of this product.

**Warranty:** Guarantee is 12 months from purchase date, proof of which is required for any claim.

**Jack Sealey Ltd t/a Sealey Group**, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk, IP32 7AR UK  
**Jack Sealey (EU) Ltd t/a Sealey Group**, Farney Street, Carrickmacross, Co. Monaghan, A81 PK68 Ireland  
 Tel: 01284 757500 • Email: [sales@sealey.co.uk](mailto:sales@sealey.co.uk) • Web: [www.sealey.co.uk](http://www.sealey.co.uk)