

PLATFORM TRUCK WITH FOLDING/REMOVABLE SIDES, 350KG CAPACITY

MODEL NO: CST806.V2

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY.





protection

Refer to instruction manual

1. SAFETY

- ✓ Always distribute the load evenly over the surface of the bed of the platform truck.
- DO NOT leave unattended, especially when loaded, unless the wheels are chocked or the truck is otherwise secured.
- DO NOT use platform truck on uneven ground and DO NOT run over kerbs or steps use a ramp.
- DO NOT allow others to ride on the platform truck.
- **DO NOT** use the truck if any part is damaged, paying particular attention to the wheels. Inspect it before use each time and replace or repair damaged or worn parts immediately.
- ✓ Check tyre pressures on the platform truck on a regular basis.
- **DO NOT** over inflate the tyres. Recommended pressure is 25psi.
- DO NOT exceed maximum load capacity of 350kg.
- **DO NOT** allow children to play on, stand upon or climb on the cart.
- ✓ Be mindful of the location of the handle it may fall from the upright position.
- ✓ Chock the wheels when loading and unloading the cart.
- ✓ ALWAYS use caution when operating the platform truck. When moving it, proceed at a safe speed, especially at corners where there could be a danger of the load shifting. Extra care should be taken on inclined surfaces.
- DO NOT use the platform truck when you are tired or under the influence of alcohol, drugs or intoxicating medication.
- **DO NOT** store material on the platform truck for an extended period of time..

2. INTRODUCTION

Heavy-duty rust resistant steel construction. Smooth steering action for easy manoeuvrability, with soft rubber gripped handle and pneumatic wheels for easy transportation over the toughest terrain. All four sides drop-down using locking pin function for easy loading. Can also be used as a flatbed for transporting oversized items. Fitted with additional removable storage tray for carrying smaller items. Suitable for a variety of warehouse, office, garden and domestic applications.

3. SPECIFICATION

Model No:	CST806.V2
Capacity:	350kg
Cart Size, Internal:	600 x 1210 x 310mm
Nett Weight:	30.77kg
Overall Height:	680mm
Overall: Length:	1220mm
Overall Width:	610mm
Platform Height:	410mm

4. ASSEMBLY


REFER TO PARTS LIST

4.1. BED ASSEMBLY

- 4.1.1. Locate Rear Axle Support (item 6) to the underside of the Bed (item 1) aligning the fixing holes to the mounting holes in Bed. Insert M8 bolts through Bed and fit M8 nyloc Nuts.
- 4.1.2. Slide Left and Right Rear Axle Braces (items 7 and 8) onto shafts of Rear Axle Support (item 6) and bolt to bed using M8 bolts and nyloc Nuts.
- 4.1.3. Insert spacers into hubs of rear Wheels (item 5) and slide over Rear Axles. Fix in place using M12 nyloc nuts and plain washers.
- 4.1.4. Locate Front Axle Support (item 9) to the underside of the Bed while aligning the fixing holes to the mounting holes in the Bed. Insert M8 bolts through Bed and fit M8 nyloc Nuts.



- 4.1.5. Bolt Centre Front Axle Brace (item 10) to the Bed.
- Locate axles into holes on Front Axle Support such that steering tab faces to the rear of the truck (see fig.1) and hold in place using 4.1.6. M12 nvloc
- 4.1.7. Bolt Steering Link Connector (item 12) to steering tabs (4.1.6) using M8 nylocs and plain washers.
- 4.1.8. Insert spacers into hubs of Front Wheels (item 5) and slide Wheels over Front Axles. Fix in place using M12 nyloc nuts and plain
- 4.1.9. Assemble Handle (item 14) to Yoke (item 11) using Plastic Coupling (item 13), supplied plastic washers and M8 nyloc bolt and plain washer.

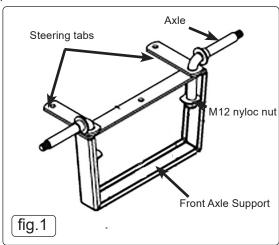

- Fit front and rear side panel release mechanisms to panels using M8 nylocs and plain washers.
- Fit truck side and end panels (fig.2, 3 & 4) to Bed using the supplied 'R' clips fitted to hinge tubes.

MAINTENANCE

- 5.1. Periodically check all fasteners for tightness.
- Check tyre pressures on a regular basis. **DO NOT** over inflate them recommended pressure is 25psi. 5.2.
- 5.3. Regularly clean and lightly lubricate all moving parts.
- 5.4. Use genuine Sealey parts to replace any worn or damaged items.
- 5.5. **DO NOT** store material on the platform truck for extended periods of time.
- 5.6. Before storing the platform truck, make sure it is clean and dry. Store it in a safe, dry childproof location.

END OF LIFE 6.

6.1. Dispose of product according to local and National regulations and content of Environment Protection footer on this page.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. Please note that other versions of this product are available. If you require documentation for alternative versions, please email or call our technical team on technical@sealey.co.uk or 01284 757505.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR







sales@sealey.co.uk 🙀 www.sealey.co.uk

