



™ HIGH SPEED HAND DRYER WITH AUTO SENSOR

MODELS: **DH378, DH379**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instruction manual

1. SAFETY

1.1. ELECTRICAL SAFETY

- WARNING!** It is the user's responsibility to check the following:
- ✓ Check all electrical equipment and appliances to ensure that they are safe before using.
- ✓ Inspect power supply leads, plugs and all electrical connections for wear and damage.
- ✓ Ensure that the insulation on all cables and on the appliance is safe before connecting it to the power supply.
- ✗ **DO NOT** use worn or damaged cables, plugs or connectors. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- ✓ Ensure that any faulty item is repaired or replaced immediately by a Sealey qualified technician.
- ✓ If the cable or plug is damaged during use, switch off the electricity supply and remove from use.
- ✓ Sealey recommend that an RCD (Residual Current Device) is used with all electrical products.
- Important:** Ensure that the voltage rating on the appliance suits the mains power supply.
- ✗ **DO NOT** pull or carry the appliance by the power cable.
- ✓ **DO NOT** pull the plug from the socket by the cable.
- ✓ The installation of a residual current device is recommended, having a rated residual operating current not exceeding 30mA. Ask an electrician for advice.

1.2. GENERAL SAFETY

- ✓ Children from age 8 years and above, persons with reduced physical, sensory, or mental capabilities those with lack of experience and knowledge can use the appliance, if they have been given supervision or instruction concerning use of the appliance in a safe way to understand the hazards involved.
- ✓ Children shall **NOT** play with the appliance.
- ✓ Cleaning and user maintenance on the appliance shall not be made by children without supervision.
- ✓ The appliance shall be disconnected from its power source during service and when replacing parts.
- WARNING! DO NOT** use this appliance near bathtubs, showers, basins, or other vessels containing water, or in places prone to freezing.
- ✓ This appliance is designed to be used in commercial areas.
- ✗ **DO NOT** open the front panel: risk of electric shock.
- ✗ **DO NOT** splash with water: risk of electric shock.
- ✗ **DO NOT** disassemble. Professional repair only.

2. INTRODUCTION

 
Wall-mounted, slim profile high-speed hand dryer designed for modern washroom environments. Delivers rapid 10–15 second drying using a powerful 105m/s airflow for fast and effective performance. Rated IP24 for splash protection in busy commercial and hospitality settings. The Dryer features a powerful 500W motor with an overall power rating of 1400 - 1650W. Suitable for bathrooms, washrooms and toilets across hospitality and commercial premises.

3. SPECIFICATION

Models: DH378/DH379
 Drying Time: 10-15s
 Filter Options: Sponge
 IP Rating: IP24
 Material: ABS
 Maximum Air Speed: 105m/s
 Maximum Air Volume: 28L/S
 Motor Class: Carbon Brush AC Motor
 Noise Rating: 76dB @ 1m
 Operating Temperature: ≤70°C
 Plug Type: Bare Wire
 Power Supply Cable Length: 1.7m
 Dimensions (WxDxH): 165 x 238 x 250mm
 Supply: 230V 50Hz
 Rated Power: 1400-1650W



4. PRODUCT OVERVIEW

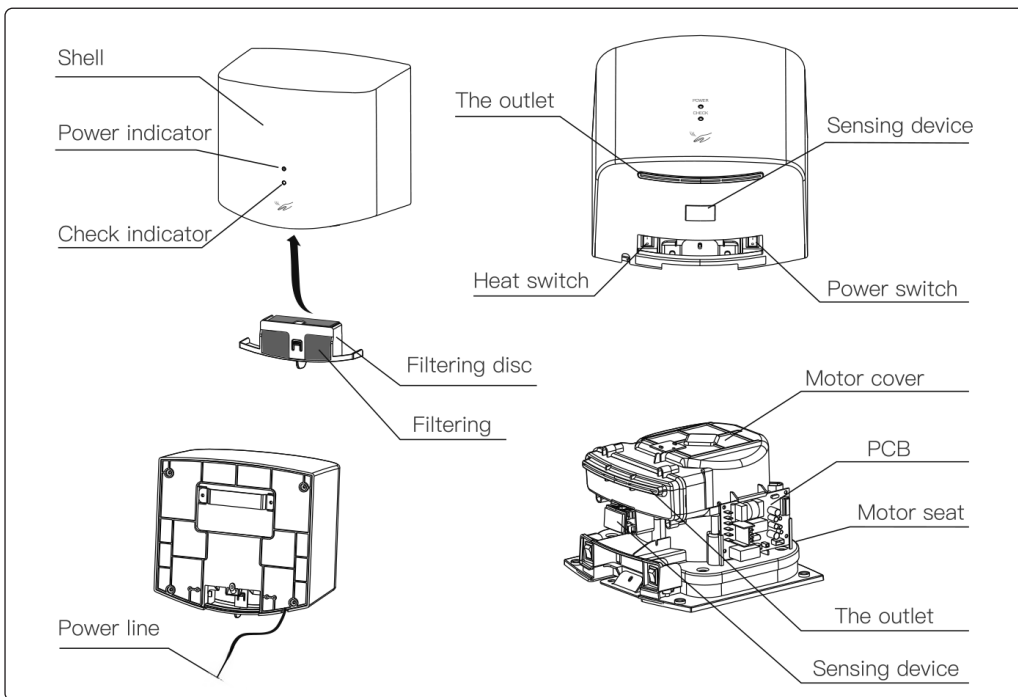


4.1. **TRANSPORT OF PRODUCT:** Keep product in original packaging to protect it prior to use.

5. INSTALLATION

- × **DO NOT** Install:
 - in places with temperatures below -10°C or over 40°C
 - in places splashed by water
 - in direct sunlight
 - in places with condensation
 - in places with flammable or corrosive gas
 - over 2000m in altitude

5.1. INSTALLATION LOCATION

The diagram below shows the recommended location and distance from the floor. Keep the unit away from a mirror as water droplets may splash out when hands are dried. Avoid places where people congregate and keep away from doors. Select a flat wall to install this product.

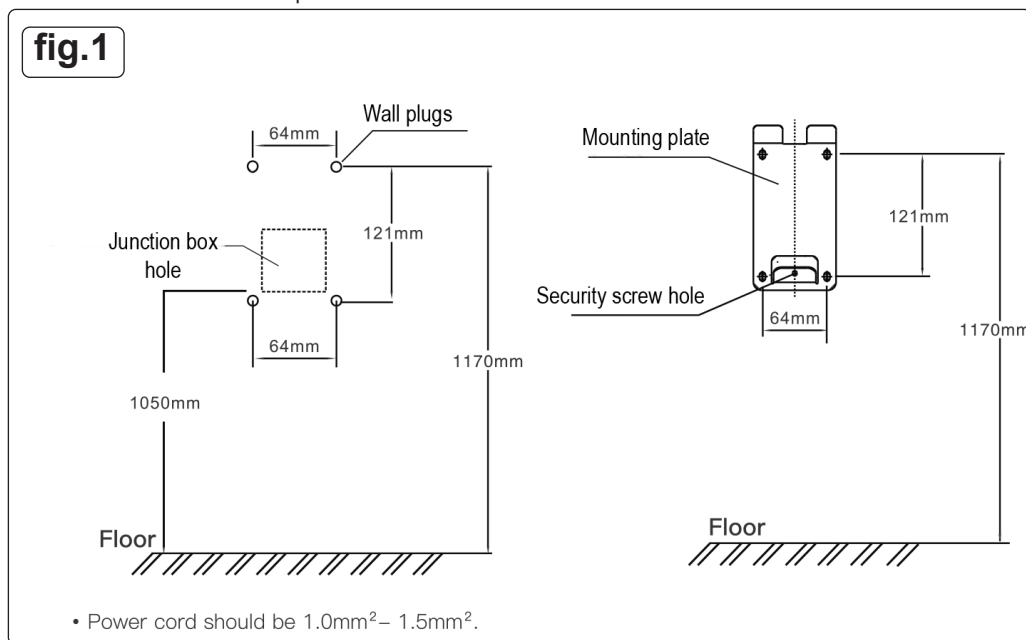 





5.2. METHOD OF INSTALLATION

5.2.1. **ELECTRICAL CONNECTION fig.2:** When installing unit without terminal box, install above the right side of unit with two-hole standard outlet. The distance should be 20-50cm.

5.2.2. **FIT WALL MOUNTING PLATE NOTE:** Installation method of fixing is not to rely on the use of adhesives.

Fix the mounting plate on wall with screws and wall plugs appropriate to the material of the wall. The unit provides a long power cord, please cut off the extra power cord as required. Connect unit to mains supply.

    - 5.2.3. Slide body onto plate.
- 5.2.4. Ensure body is seated on wall mounting plate, fig.5.
- 5.2.4. Remove filter box and fit security screw into 45° bracket and into wall mounting plate, fig.5.

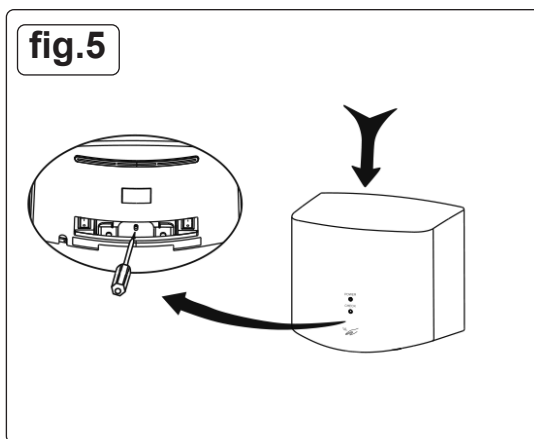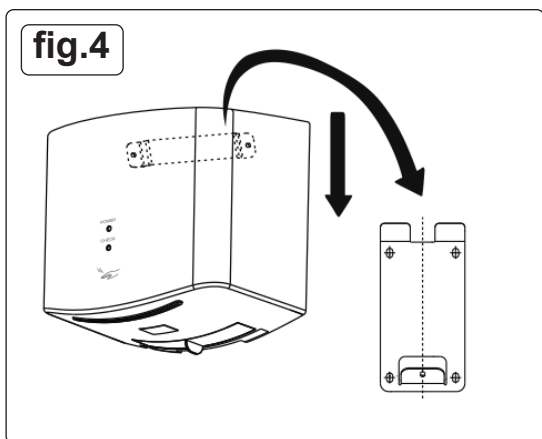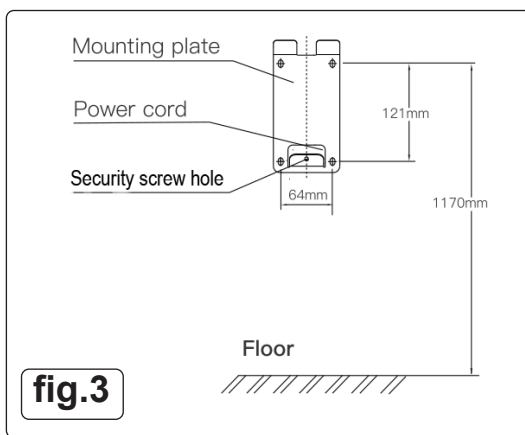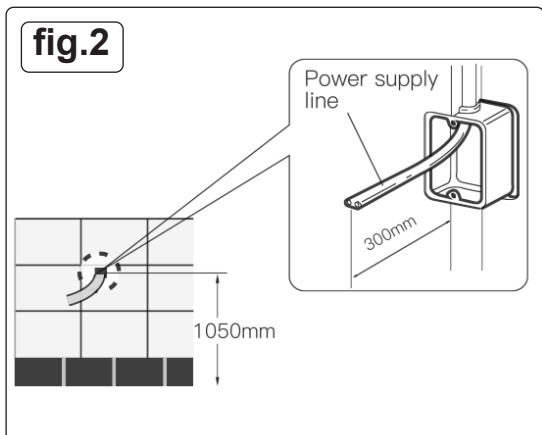


5.3. **INSTALLATION CHECKLIST**

	Step	Confirm information	Check & Note
1	Gently shake unit	Unit is installed firmly	If unit moves and is noisy it isn't installed firmly enough
2	Confirm power and voltage	Connect to rated power supply	Incorrect power supply will burn unit out and is dangerous
3	Switch on mains supply Turn power switch on	Check power indicator light	Check power indicator light is not too bright
4	Place hands for drying	High speed air should blow out	Confirm distance sensor is working
5	Turn heating switch on	High speed hot air should blow out	Dryer can be set for hot or cold operation


6. OPERATION



 - 6.1. Place hands within range of sensor turn hands over rub hands together
- 6.2. If unit appears to be operating abnormally: vibration, unusual noise, remove from service and seek professional repair advice.

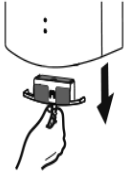

Remove filter box

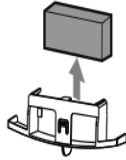 

Remove the filter



Clean the filter: blow out the dust. Change when too dusty or at 3 years old



Washing is prohibited as it will damage the antibacterial properties of the filter

fig.5

7. MAINTENANCE

7.1. EXTERNAL MAINTENANCE

Wipe exterior with a damp cloth with mild detergent. **DO NOT** use solvents or aggressive cleaning products.

7.2. INTERNAL MAINTENANCE: see fig.5

8. END OF LIFE

8.1. Recycle product according to regulations in force at the end of its useful life.



WEEE REGULATIONS

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Jack Sealey Ltd t/a Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk, IP32 7AR UK
Jack Sealey (EU) Ltd t/a Sealey Group, Farney Street, Carrickmacross, Co. Monaghan, A81 PK68 Ireland
Tel: 01284 757500 • Email: sales@sealey.co.uk • Web: www.sealey.co.uk