



75TONNE FLOOR TYPE AIR/HYDRAULIC PRESS WITH FOOT PEDAL

MODEL NO: YK759FAH.V2

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instructions



Wear eye protection



Wear protective gloves



Wear safety footwear



Wear protective clothing



Warning:
crushing of hands



Warning!
Beware of breaking and sudden ejection of work pieces

1. SAFETY


- ✓ Familiarise yourself with the applications, limitations, and hazards peculiar to the press.
- ✓ Maintain the press in good condition (use an authorised service agent).
- ✓ Replace or repair damaged parts. Use recommended parts only. Unauthorised parts may be dangerous and will invalidate the warranty.
- ✓ Keep the press clean for best and safest performance.
- ✓ Locate the press in an adequate working area for its function, keep area clean and tidy and free from unrelated materials and ensure there is adequate lighting.
- ✓ Ensure the workpiece is correctly secured before operating the press.
- ✓ Ensure that all fittings are tight before each use.
- ✓ Remove ill fitting clothing. Remove ties, watches, rings, loose jewellery and contain long hair.
- ✓ Keep hands and body clear of the work table when operating the press.
- ✓ Maintain correct balance and footing. Ensure the floor is not slippery and wear non-slip footwear.
- ✓ Keep children and unauthorised persons away from the working area.
- ✓ Securely attach the press to a flat, firm, level surface capable of supporting the weight of press and any workpiece taking into account clearance for workpieces.
- ✓ When not in use, release pressure from the hydraulic unit and clean the press. Stand or store the V blocks in a safe location.
- * **DO NOT** operate the press if any parts are missing as this may cause failure and/or possible personal injury.
- * **DO NOT** use the press for a task it is not designed to perform.
- * **DO NOT** make any modifications to the press.
- * **DO NOT** adjust or tamper with the safety valve.
- * **DO NOT** exceed the rated capacity of the press.
- * **DO NOT** apply off-centre loads.
- * **DO NOT** allow the workpiece or the press plates to fall from the work table.
- * **DO NOT** get the press wet or use in damp or wet locations or areas where there is condensation.
- * **DO NOT** operate the press when you are tired or under the influence of alcohol, drugs or intoxicating medication.
- * **DO NOT** climb upon the press.
- * **DO NOT** use to compress a spring or any other item that could disengage and cause a potential hazard including personal injury.
- * **DO NOT** stand directly in front of the loaded press and never leave a loaded press unattended.
- * **DO NOT** allow untrained persons to operate the press.
- **WARNING!** Always wear approved eye or face protection when operating the press. A full range of personal safety equipment is available from your Sealey stockist.
- * **DO NOT** top up hydraulic unit with brake fluid, or any other fluid other than a good quality hydraulic oil (Sealey Part Number: HJO500MLS/HJO5LS) as this may cause serious damage to the hydraulic unit and will invalidate the warranty.
- **WARNING!** Always position the press against a wall. If the press is situated in the open workshop, it is essential that a guard be placed at the rear of the unit. This will prevent injury to bystanders in the event of the workpiece ejecting suddenly.
- **WARNING!** The warnings, cautions and instructions in this manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be applied by the operator.
- ▲ **DANGER!** The press is top heavy. If it requires moving after assembly or for relocation, use suitable slings around the top crossbeam, or lift direct with a forklift with the forks located under the top crossbeam. **DO NOT** use a pallet truck.

2. INTRODUCTION

Steel frame construction with side mounted air motor powering hydraulic pump unit. 2-Speed manual operation and sliding hydraulic ram assembly giving 260mm of lateral travel for off-centre pressing applications. Fitted with ram pressure gauge and supplied with flat pressing plate/V-blocks.

3. SPECIFICATION

Model No: YK759FAH.V2
Air Consumption: 7cfm
Bench or Floor Mounting: Floor
Capacity: 75 Tonne
Gauge Included: Yes
Lateral Ram Travel: 260mm
Maximum Height - Ram to Table: 884mm
Min./Max. Air Supply Pressure: 0.75/0.85MPa
Minimum Height - Ram to Table: 170mm
Operating Table Width: 800mm
Optional Accessories: YKSG75 - Safety Guard
Optional Accessories: YKPP8 - Press Pin Set
Overall Height: 1925mm
Overall Width: 1560mm
Ram Diameter: Ø93mm
Ram Stroke: 250mm
Table Aperture: 251mm
Type: Air/Hydraulic
Working Pressure: 108-123psi
Working Table Depth: 279mm
Working Table Width: 1020mm

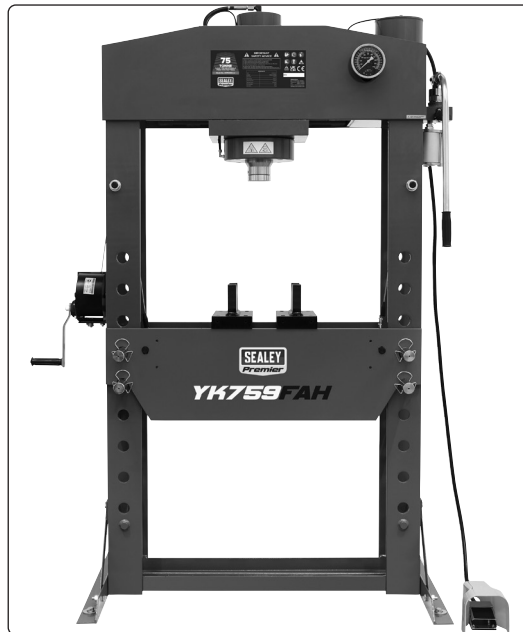

4. ASSEMBLY

Unpack the product and check contents. Should there be any damaged or missing parts contact your supplier immediately.
Take care to ensure safety when moving main frame from packing as the unit is very heavy.

Refer to attached parts list.

Seek assistance from another person on assembly of heavy parts.

Assemble press, if possible, in close proximity to where the press will be located.

4.1. FRAME ASSEMBLY

- 4.1.1. Attach load slings around the top cross member of the frame (#43) and using a suitable hoist or gantry, slowly, and in a controlled manner lift the frame up and out of the transportation crate, into an upright position.

☐ **WARNING!** Take care when lifting the frame not to damage the pre-assembled ram assembly (#46).

- 4.1.2. Keep the frame assembly in an upright position, held safely by the load slings.

4.2. ATTACH BASE SECTION

NOTE: The base section (#1), supports (#3), hex head screw M12 x 35 (#2), flat washer M12 (#6), spring washer M12 (#5) and nut M12 (#4) are supplied pre-assembled.

- 4.2.1. Remove the central fixings only, hex head screw M12 x 35 (#2), flat washer M12 (#6), spring washer M12 (#5) and nut M12 (#4) from the base section (#1).

- 4.2.2. Position the base section (#1) onto the frame (#43) and secure with hex head screw M12 x 35 (#2), flat washer M12 (#6), spring washer M12 (#5) and nut M12 (#4) loosely.

- 4.2.3. Remove the top fixings only, hex head screw M12 x 35 (#2), flat washer M12 (#6), spring washer M12 (#5) and nut M12 (#4) from one of the supports (#1).

- 4.2.4. Position the support (#1) onto the frame (#43) and secure with hex head screw M12 x 35 (#2), flat washer M12 (#6), spring washer M12 (#5) and nut M12 (#4) loosely.

- 4.2.5. Follow section 4.2.4 to attach the other support (#1).

- 4.2.6. Repeat sections 4.2.1 to 4.2.5 to attach the other base assembly.

- 4.2.7. Move to an upright position using appropriate equipment.

- 4.2.8. On a flat level floor, level the frame using a good quality spirit level. Fully tighten all fixings.

- 4.2.9. Remove the load slings and store them in a safe and secure location.

☐ **WARNING!** Take care and seek assistance from another person when lowering and levelling the frame assembly onto the floor.

4.3. ATTACH THE HAND WINCH ASSEMBLY

☐ **WARNING!** Seek assistance from another person with this task as the hand winch assembly is heavy.

- 4.3.1. Transfer the hand winch assembly (#12) from its transport location by firstly removing the fixings, hex head screw M12 x 35 (#2), flat washer M12 (#6), spring washer M12 (#5) and nut M12 (#4) from hand winch support (#13). Retain the fixings.

- 4.3.2. Move the hand winch assembly (#12) to the outside of the left hand post (position H on the parts diagram) and secure with the retained fixings, loosely.

- 4.3.3. Ensure that the cables are located correctly in the rollers prior to fully tightening fixings.

4.4. ATTACH THE PUMP ASSEMBLY

☐ **WARNING!** Seek assistance from another person with this task as the pump assembly is heavy.

NOTE: The pump assembly (#53), air hose (#59), foot pedal (#61), air hose (#65), quick coupler (male) (#75) and short hose (#56) are supplied pre-assembled.

- 4.4.1. Transfer the pump assembly (#53) from its transport location by firstly removing the fixings, hex head screw M10 x 45 (#54) and flat washer M10 (#15). Retain the fixings.

- 4.4.2. Attach the pump assembly (#53) into position at the top, right hand side of frame (#43) and secure with the retained fixings.

4.5. ATTACH THE PUMP HOSE.

NOTE: The short hose C (#56) is pre-assembled to the pump (#53).

- 4.5.1. Remove the dust plug from the end of short hose (#56). **DO NOT** discard.


- 4.5.2. Attach short hose (#56) to gauge fitting (#51) at position A on the parts diagram.

4.6. ATTACH THE OIL HOSE

NOTE: The oil hose B (#58) is pre-assembled to the ram (#46).

- 4.6.1. Remove the dust plug from the end of oil hose (#58). **DO NOT** discard

- 4.6.2. Remove the dust plug from the oil filler nut (#74) and attach the oil hose (#58), at position B on the parts diagram.
- 4.6.3. **IMPORTANT:** Open transit plug, for use, located on top of pump assembly.
- 4.7. **ATTACH THE RAM HOSE.**
NOTE: The long hose C (#57) is pre-assembled to the ram (#46).
- 4.7.1. Remove the dust plug from the end of long hose (#57). **DO NOT** discard.
- 4.7.2. Remove the dust plug from the connector for short/long oil hose (#71). **DO NOT** discard.
- 4.7.3. Attach the long hose (#57) to the connector for short/long oil hose (#71), located on the pump assembly (#53).
- 4.8. **PRESSURE GAUGE**
- 4.8.1. Remove the dust cap hex bolt from the pressure gauge (#50) and gauge fitting (#51). **DO NOT** discard.
- 4.8.2. Screw the pressure gauge (#50) and nylon ring (#72) into the pressure gauge fitting (#51) until tight.
 * **DO NOT** over-tighten.
- 4.9. **ATTACH THE HANDLE**
- 4.9.1. Remove the locking fixings hex head screw M8 x 20 (#66) and M8 flat washer (#67) from the handle (#64) and retain.
- 4.9.2. Insert the handle into the pump handle holder and secure with the retained fixings.
- 4.10. **PLACING THE V-BLOCKS**
- 4.10.1. Place the V-blocks (#32), in the required orientation, onto the bed frame (#31).
☐ **WARNING!** The V-blocks are heavy.
- 4.11. **AIR SUPPLY**
- 4.11.1. Connect a compressed air supply hose (fig 1) to the quick coupler (male) (#75).

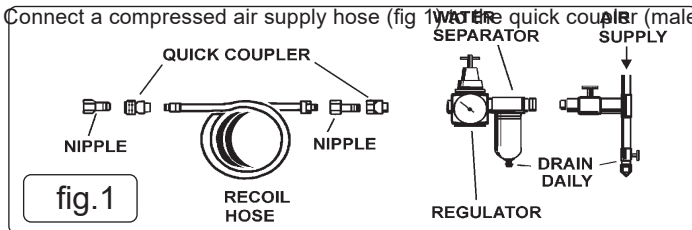

5. INSTALLATION

DANGER! Models are purpose designed to withstand greater loads than the hydraulic units can develop. For safety reasons, always ensure the workpiece and press tools are secured on the table and will not flex or suddenly “give way” causing danger to operator or the component.

- 5.1. *Ensure you have read and understood section 1 Safety Instructions.*
☐ **WARNING!** Ensure the mounting surface is capable of withstanding the weight of the press and workpieces.
- 5.2. **SECURE PRESS TO THE FLOOR**
 * **DO NOT** attempt to move assembled press manually. When moving the press follow the instructions as detailed in Section 1.
- 5.2.1. Move the press to the mounting location, and spot mark through fixing holes in base section (#1) onto the floor.
- 5.2.2. Check for any hidden wiring or cables, if needed change the location for the holes.
- 5.2.3. Temporarily move the press to the side.
- 5.2.4. Use a masonry drill bit to drill the four holes about 3” to 4” (75 to 100mm) deep into the concrete or wood, as necessary.
- 5.2.5. Clean out the drilled holes.
- 5.2.6. Position the press and align the holes in the base section with the holes in the floor.
- 5.2.7. Use four concrete anchor bolts or lag bolts for wooden floors, (not included), to secure to the floor.
☐ **WARNING!** To prevent serious injury **DO NOT** use damaged equipment. If abnormal noise or vibration occurs have the problem corrected.
- 5.3. **BEFORE FIRST USE**
- 5.3.1. Before operating the press, purge the hydraulic system in order to eliminate any air that may have built up during transit. Open the release valve and pump the handle several times and close the release valve. Should the system malfunction at any time, repeating this process may resolve the problem.
- 5.4. **SETTING THE BED FRAME HEIGHT**
- 5.4.1. Turn the hand winch handle (#12) until the cables just takes the weight of the bed frame (#31).
- 5.4.2. Remove the retaining clips (#19) from the back of the bed frame pins (#18) and withdraw the pins, store in a secure location.
- 5.4.3. Use the hand winch handle (#12) to raise or lower the bed frame (#31) to the desired height.
- 5.4.4. Re-insert the bed frame pins (#18) and the retaining clips (#19).
- 5.4.5. Slacken off the hand winch (#12) so that the bed frame pins (#18) are taking the full weight of the bed frame (#31).
- 5.5. Check that the release valve on the hydraulic unit is fully closed, ready for operating.
- 5.6. Position the V-block (#32) or press tools to be used onto the table and align beneath the ram. Place workpiece onto the table or V-blocks and align beneath the ram as required.
NOTE: Care must be taken to ensure a V-block does not fall from the press table. If necessary hold the configuration in position with clamps (not supplied).
☐ **WARNING! DO NOT** apply off centre loads.
- 5.7. Connect the air supply to the foot pedal (#61) quick coupler (male) (#75).
- 5.8. Use the handle or the foot pedal to lower the ram to the workpiece.
☐ **WARNING!** Monitor the pressure gauge during operation to ensure that the rated capacity of the press is not exceeded.
- 5.9. When the operation is complete turn the release valve anti-clockwise to release the pressure. The piston and the ram head will retract automatically.
- 5.10. Disconnect the air supply.
NOTE: Always keep the piston retracted after use to avoid corrosion.

6. MAINTENANCE

NOTE: Maintenance and repair must be carried out by qualified person. Contact your Sealey stockist for details.

- 6.1. Check all fittings are tight before each use.

- 6.2. Lubricate all moving parts at regular intervals.
- 6.3. Always keep the press clean, dry, and protect from harsh conditions.
- 6.4. Should you need to replace the oil ensure the piston is fully retracted. An excess of oil will render the press inoperative. Use only appropriate Sealey hydraulic jack oil. **DO NOT** use brake fluid. Contact your local Sealey stockist for details. Purge the system to remove any air.
- 6.5. Check your model parts information for spares.

IMPORTANT: NO RESPONSIBILITY IS ACCEPTED FOR INCORRECT USE OF THE MACHINE.

Hydraulic products are only repaired by local service agents. We have service/repair agents in all parts of the UK.

DO NOT RETURN PRODUCT TO US. Please telephone us on 01284 757500 to obtain the address and phone number of your local agent.

If the product is under guarantee please contact your stockist.

De-commissioning Product

Should the product become completely unserviceable and require disposal, draw off the oil into an approved container and dispose of the product and the oil according to local regulations.



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



REGISTER YOUR
PURCHASE HERE

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. Please note that other versions of this product are available. If you require documentation for alternative versions, please email or call our technical team on technical@sealey.co.uk or 01284 757505.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 60 months from purchase date, proof of which is required for any claim.

Jack Sealey Ltd t/a Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk, IP32 7AR UK

Jack Sealey (EU) Ltd t/a Sealey Group, Farney Street, Carrickmacross, Co. Monaghan, A81 PK68 Ireland

Tel: 01284 757500 • **Email:** sales@sealey.co.uk • **Web:** www.sealey.co.uk