



Item	Part No.	Description
1	PSI1000.01	Power Socket
2	PSI1000.02	Indicator Light
3	PSI1000.03	Switch, On/Off Rocker 16A 250V
4	PSI1000.04	Rd Head S/T Screw M3 x 6mm Black
5	PSI600.05	Front Panel
6	PSI300.V2-06	Lower Panel
7	PSI300.V2-07	Upper Panel
8	PSI1000.08	Side Cover
9	PSI300.V2-09	Fan

Item	Part No.	Description
10	PSI300.V2-10	Fan Cover
11	PSI300.V2-11	Screw
13	PSI600.13	Terminal (Positive)
14	PSI600.14	Terminal (Negative)
15	PSI300.V2-15	Circuit Board
16	PSI300.V2-16	USB Port
--	PSI300.V2-17	Cigarette Lighter Plug (Not Shown)
--	PSI300.V2-18	Fuse 20A (Not Shown)

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. There may be alternative versions of this product, please contact us should you require this information.

IMPORTANT: No liability is accepted for incorrect use of product. Spare parts must be fitted by a competent person

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.