



INDUSTRIAL FAN HEATERS:

BTU/HR: 17,000, 31,000, 51,000: OUTPUT 5KW, 9KW, 15KW

MODEL NO: EH5001.V3, EH9001.V3, EH15001.V2

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to
instructions



Indoor Use
Only



Do Not
Cover

IMPORTANT NOTE: These models require a 3-phase supply. Please ensure installation is carried out by a competent electrician.

1. SAFETY

- ✓ **This product is only suitable for well insulated spaces or occasional use.**
- 1.1. **ELECTRICAL SAFETY**
 - ☐ **WARNING!** It is the user's responsibility to check the following:
 - ✓ Check all electrical equipment and appliances to ensure that they are safe before using.
 - ✓ Inspect power supply leads, plugs and all electrical connections for wear and damage.
 - ✓ Ensure that the insulation on all cables and on the appliance is safe before connecting it to the power supply.
 - ✗ **DO NOT** use worn or damaged cables, plugs or connectors.
 - ✓ Ensure that any faulty item is repaired or replaced immediately by a Sealey qualified technician.
 - ✓ If the cable or plug is damaged during use, switch off the electricity supply and remove from use. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
 - ✓ Sealey recommend that an RCD (Residual Current Device) is used with all electrical products.
 - Important:** Ensure that the voltage rating on the appliance suits the mains power supply.
 - ✗ **DO NOT** pull or carry the appliance by the power cable.
 - ✗ **DO NOT** pull the plug from the socket by the cable.
- 1.2. **GENERAL SAFETY**
 - ✓ This piece of equipment is solely designed for use by a responsible adult/professional user who has received adequate training on its operation & safety risks.
 - ✓ Children shall NOT play with the appliance.
 - ✓ Cleaning and user maintenance on the appliance shall not be made by children without supervision.
 - ✓ Children of less than 3 years should be kept away unless continuously supervised.
 - ✓ Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate, and clean the appliance or perform user maintenance.
 - ✓ The heater must not be located immediately below a socket outlet.
 - CAUTION —** Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
 - ☐ **WARNING!** In order to avoid overheating, do not cover the heater.
 - ✓ Servicing or maintenance must only be carried out by an authorised service agent.
 - ✓ Check that the heater is in sound condition and good working order. Take immediate action to repair or replace damaged parts.
 - ✓ Use recommended parts only. Unapproved parts may be dangerous and will invalidate the warranty.
 - ✗ **DO NOT** attempt to repair a damaged heater, contact an authorised service agent.
 - ☐ **WARNING! DO NOT** use the heater near flammable material, liquids, solids, gases or compressed gas cylinders etc.
 - ✗ **DO NOT** place the heater immediately below any electrical outlet.
 - ✗ **DO NOT** place the heater on a raised surface or anywhere where it could topple over.
 - ✗ **DO NOT** get the heater wet or use in areas of high condensation.
 - ✗ **DO NOT** allow the power lead to touch hot surfaces.
 - ✗ **DO NOT** connect the heater to a timer device or other equipment than can automatically switch the heater on or off.
 - ✗ **DO NOT** operate the heater when you are tired or under the influence of alcohol, drugs or intoxicating medication.
 - ✗ **DO NOT** stand on the heater.
 - ✗ **DO NOT** use the heater with wet hands or when there is water on the power cord.
 - ✗ **DO NOT** use the heater for anything other than its intended purpose. It is designed to provide heat in enclosed areas such as workshops and other industrial areas. It is not suitable for drying clothes or laundry.
 - ✓ Ensure that the heater is correctly turned off when not in use and store in a safe, dry, childproof location.
- 1.3. **PORTABLE HEATER SAFETY**
 - ✗ **DO NOT** use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
 - ✗ **DO NOT** use this heater if it has been dropped.
 - ✗ **DO NOT** use if there are visible signs of damage to the heater.
 - ✓ Use this heater on a horizontal and stable surface, or fix it to the wall, as applicable.
 - ☐ **WARNING! DO NOT** use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
 - ☐ **WARNING!** To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1m from the air outlet.

2. INTRODUCTION

Electric fan heater for industrial applications. Features two heat settings and adjustable thermostat control with fan only option. Auto cooling system to prevent unit from overheating during use. A totally dry heat with no condensation, no gas, no fumes and no smell. Ideal for workshops and garages. Easily portable with carry frame. 17,000 Btu/hr(5kW) Heat output, heats an area of 48m³. Includes tip over switch for additional safety as well as front supports. Supply: 400V - 16A. Supplied with 3-phase power cable and 16A plug. Tip-Over Protection reduces risk of accidents by automatically improving stability during use.

3. SPECIFICATION

Model No:	EH5001.V3	EH9001.V3	EH15001.V2
Heated Area:	48m³	80m³	120m³
Plug Type:	Red - 16A-4P + E		Red - 32A-4P+E
Power Supply Cable Length:	1.35m		N/A
Power:	2500/5000W	4500/9000W	7500/15000W
Supply:	400V 3~ 50Hz - 16A		400V 3~ 50Hz - 32A
Output:	17,000Btu/hr	31,000Btu/hr	51,000Btu/hr

4. FEATURES



5. ASSEMBLY

5.1. EH15001.V2 ONLY - ASSEMBLY OF THE WHEELS. (fig.2)


- 5.1.1. Take the axle rod and insert it through the holes in the 'V' frames so that the threaded rod ends protrude equally either side. Retain the axle rod in this position by inserting a split pin through the holes situated just on the inside of each leg frame.
- 5.1.2. Slide a plain washer over each end of the axle rod, followed by a wheel then followed by another plain washer.
- 5.1.3. Screw a nyloc nut onto each end of the axle by hand until it begins to bite. Hold one nut steady with a 19mm spanner and progressively finger-tighten each nut until it bottoms out on the thread. Once the heater body is fitted between the legs tighten the nuts to fix the wheels in position.


5.2. EH15001.V2 ONLY - ASSEMBLY OF THE LEGS TO BODY. (fig.1)

- 5.2.1. Screw thumb-wheel, lock washer and plain washer finger-tight into insert in body of heater via central hole in the gusset at the top of the legs.
- 5.2.2. Screw pivot bolt into insert fitted to body via the slot in the gusset. Tighten all fixings once assembled.
- 5.2.3. Note that the axle hole at the shorter end of the 'V' frames should be orientated towards the back of the heater.

5.3. EH15001.V2 ONLY - ASSEMBLY OF THE HANDLE. (fig.3)

- 5.3.1. Slide a plain washer over each of the four M5 x 50mm bolts supplied.
- 5.3.2. Lay the 'U' shaped handle frame onto the front face of the leg frames and align the two holes at each end of the handle frame with the two holes in each leg frame. Insert two bolts at each joint as indicated in fig.3.
- 5.3.3. Whilst continuing to support the handle frame slide a plain washer followed by a split washer onto the end of each protruding bolt and retain them with a nut. Tighten all four nuts with an 8mm spanner.

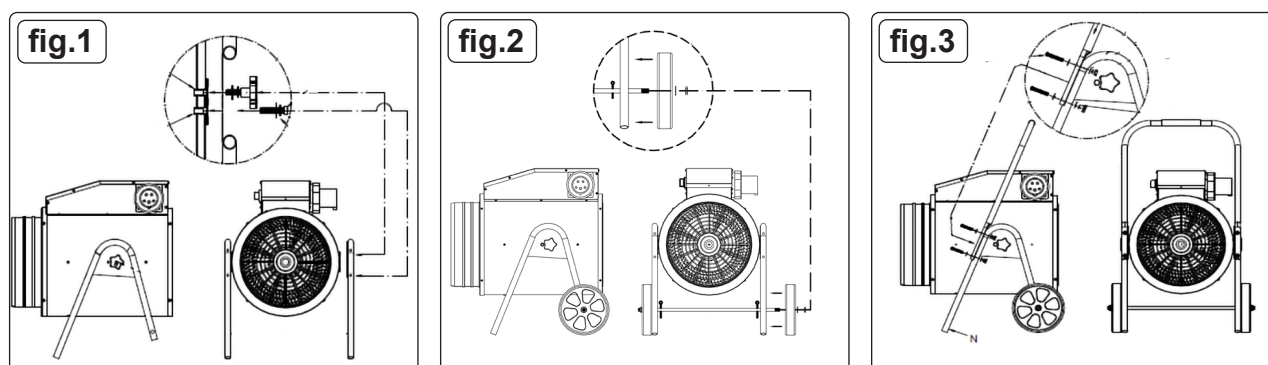

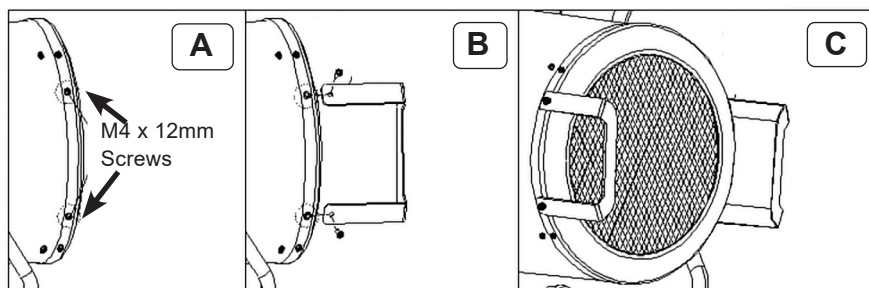

- 5.3.4. Remove screws (M4 x 12mm) from both sides of heater throat (fig.4A).
 5.3.5. Attach supports using screws from 4.4.1 above (fig.4B).
 5.3.6. Note orientation of supports (fig.4C).

fig.4

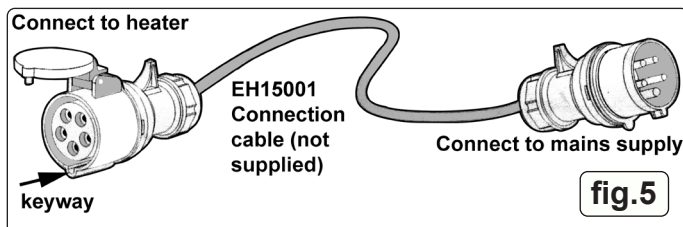


fig.5

5.4. CONNECTING TO MAINS SUPPLY

- 5.4.1. EH15001.V3 is supplied with a protected 5 pin connector mounted on the side of the control housing. In order to connect to the mains it will be necessary to have the extension cable shown in fig.5 made up by a qualified electrician. (This connector is not supplied with the machine.) The cable should be no shorter than 1.8m and no longer than 3.0m.
 5.4.2. Before connecting the heaters to the mains ensure that the selector switch is set to OFF and the thermostat is set at minimum.
 5.4.3. Hold open the protective cover on the socket connector on the extension lead as shown above and present it to the heater connector in the correct orientation so that the spigot on the heater connector passes into the keyway on the socket connector. Push the socket connector fully home.
 5.4.4. Connect the other end of the extension cable to the mains supply.

5.5. THERMOSTATIC PROTECTION.

- 5.5.1. The heaters have a thermal cut out to prevent the unit from overheating for any reason, especially if the air input is restricted. If the temperature of the front grille reaches 45°C a thermal cut-out will operate, turning off the heating elements. When the fan has cooled the unit to 40°C, normal thermostatic operation will resume.
 5.5.2. **AUTO COOLING.** It is recommended that the thermostat should be set to the minimum to cool the unit prior to switching off. If the unit is switched off when operating at full temperature, and the front grille has reached 45°C, the time delay thermostat will keep the fan running to cool down the unit. When the front grille has cooled to 40°C the fan will stop running.
NOTE: Auto cooling will only function if the unit is plugged into the mains and the mains is ON.

6. OPERATION

- 6.1. Position heater in an upright position on a firm and level surface and at a safe distance from any obstructions, flammable substances etc. Keep to a minimum of 1m clearance at the front, rear and sides.
 6.2. Connect the heater to a suitable mains supply.
 6.3. Referring to fig.6, set the thermostat dial to the maximum setting (fully clockwise).
 6.4. The heater will switch on when the power setting selector is set to one of the power settings.
NOTE: It will take up to three minutes for the heater to reach optimum temperature.
 6.5. Once the room reaches the required temperature, turn the thermostat dial slowly counter-clockwise until the thermostat clicks, leave the dial in this position and the room temperature will be maintained at this setting. The heater will continue to operate until the power switch is turned to the OFF position.
 6.6. For fan only operation, turn the power/fan selector to the fan only setting and set the thermostat to its minimum setting.
 6.7. When not in use, disconnect the heater from the mains supply. Store it in a safe, dry, childproof location.

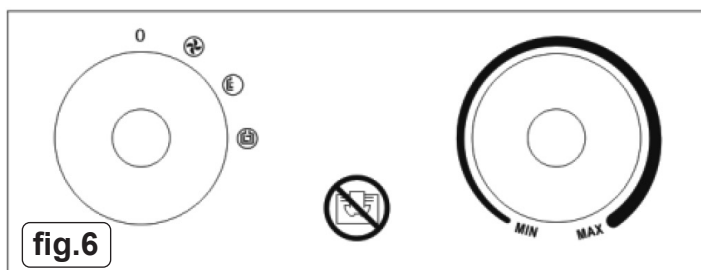


fig.6

7. MAINTENANCE

- ☐ **WARNING!** Before attempting any maintenance, ensure that the unit is unplugged from the mains power supply and that it has cooled down.
 7.1. Clean the heater with a soft dry cloth only. DO NOT use abrasives or solvents.
 7.2. Periodically check the heater grille to ensure that it is not blocked.
 7.3. No other maintenance is necessary. If a problem with the heater is experienced, or if the power lead or plug is damaged, contact your local authorised service agent for repair. **DO NOT** dismantle or tamper with the heater, as this may be dangerous and will invalidate the warranty.
NOTE: It may take up to three minutes for the heater elements to reach optimum temperature. This is normal and not a fault.



ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



REGISTER YOUR
PURCHASE HERE



WEEE REGULATIONS

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. Please note that other versions of this product are available. If you require documentation for alternative versions, please email or call our technical team on technical@sealey.co.uk or 01284 757505.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Jack Sealey Ltd t/a Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk, IP32 7AR UK
Jack Sealey (EU) Ltd t/a Sealey Group, Farney Street, Carrickmacross, Co. Monaghan, A81 PK68 Ireland
Tel: 01284 757500 • **Email:** sales@sealey.co.uk • **Web:** www.sealey.co.uk

Product Information Sheet. Local Space Heaters, Electric.

SUPPLIER_NAME_OR_TRADEMARK Sealey EU Ltd.
DELEGATED_ACT 2024/1103/EU
MODEL_IDENTIFIER EH5001

Industrial Fan Heater 5kW 400V

ADDRESS Farney Street, Carrickmacross, Co. Monaghan, A81 PK68 Ireland
PHONE_NUMBER 01284 757 500
EMAIL_ADDRESS TechnicalCompliance@sealey.co.uk

Heat output

**Type of heat input, for electric storage local
space heaters only**

Nominal heat output kW	5.000	manual heat charge control, with integrated thermostat	NA
Minimum heat output (indicative) kW	2.500	manual heat charge control with room and/or outdoor temperature feedback	NA
Maximum continuous heat output kW	5.000	electronic heat charge control with room and/or outdoor temperature feedback	NA
		fan assisted heat output	NA

Power consumption

Other control options

Nominal heat output W	NA	Single stage heat output, no room temperature control	No
In standby mode W	NA	Two or more manual stages, no room temperature control	No
In idle mode W	0	With mechanical thermostat room temperature control	Yes
In network standby W	NA	With electronic room temperature control	No
Standby mode with display of information of status	NO	With electronic room temperature control plus day timer	No
Seasonal space heating energy efficiency in active mode %	85	With electronic room temperature control plus week timer	No

Other control options

Room temperature control, with presence detection	No
Room temperature control, with open window detection	No
with distance control option	No
with adaptive start control	No
with working time limitation	No
with black bulb sensor	No
with self-learning functionality	No
with control accuracy	No

Suppliers website <https://www.sealey.co.uk/>

Product Information Sheet. Local Space Heaters, Electric.

SUPPLIER_NAME_OR_TRADEMARK

Sealey EU Ltd.

DELEGATED_ACT

2024/1103/EU

MODEL_IDENTIFIER

EH9001

Industrial Fan Heater 9kW 400V

ADDRESS

Farney Street, Carrickmacross, Co. Monaghan, A81 PK68 Ireland

PHONE_NUMBER

01284 757 500

EMAIL_ADDRESS

TechnicalCompliance@sealey.co.uk

Heat output

Type of heat input, for electric storage local space heaters only

Nominal heat output kW	9.000	manual heat charge control, with integrated thermostat	NA
Minimum heat output (indicative) kW	4.500	manual heat charge control with room and/or outdoor temperature feedback	NA
Maximum continuous heat output kW	9.000	electronic heat charge control with room and/or outdoor temperature feedback	NA
		fan assisted heat output	NA

Power consumption

Other control options

Nominal heat output W	NA	Single stage heat output, no room temperature control	No
In standby mode W	NA	Two or more manual stages, no room temperature control	No
In idle mode W	0	With mechanical thermostat room temperature control	Yes
In network standby W	NA	With electronic room temperature control	No
Standby mode with display of information of status	No	With electronic room temperature control plus day timer	No
Seasonal space heating energy efficiency in active mode %	85	With electronic room temperature control plus week timer	No

Other control options

Room temperature control, with presence detection	No
Room temperature control, with open window detection	No
with distance control option	No
with adaptive start control	No
with working time limitation	No
with black bulb sensor	No
with self-learning functionality	0
with control accuracy	0

Suppliers website

<https://www.sealey.co.uk/>

Product Information Sheet. Local Space Heaters, Electric.

SUPPLIER_NAME_OR_TRADEMARK

Sealey EU Ltd.

DELEGATED_ACT

2015/1188/EU

MODEL_IDENTIFIER

EH15001

Industrial Fan Heater 15kW 415V 3ph

ADDRESS

Farney Street, Carrickmacross, Co. Monaghan, A81 PK68 Ireland

PHONE_NUMBER

01284 757 500

EMAIL_ADDRESS

TechnicalCompliance@sealey.co.uk

Heat output

Type of heat input, for electric storage local space heaters only

Nominal heat output kW	15.000	manual heat charge control, with integrated thermostat	NA
Minimum heat output (indicative) kW	5.000	manual heat charge control with room and/or outdoor temperature feedback	NA
Maximum continuous heat output kW	15.000	electronic heat charge control with room and/or outdoor temperature feedback	NA
		fan assisted heat output	NA

Auxiliary electricity consumption

Other control options

Nominal heat output kW	NA	Single stage heat output, no room temperature control	0
Minimum heat output (indicative) kW	NA	Two or more manual stages, no room temperature control	0
In standby mode kW	NA	With mechanical thermostat room temperature control	0
		With electronic room temperature control	0
		With electronic room temperature control plus day timer	0
		With electronic room temperature control plus week timer	0

Other control options

Room temperature control, with presence detection	No
Room temperature control, with open window detection	No
with distance control option	No
with adaptive start control	No
with working time limitation	No
with black bulb sensor	No

Suppliers website

<https://www.sealey.co.uk/>